 


# Draytek firmware upgrade

Article Number: 207 | Rating: Unrated | Last Updated: Tue, May 22, 2018 at 10:59 AM

In order to update your Draytek's firmware, follow the below steps. Please note this guide is based off a Draytek 2860, and different models and firmwares may change.

First log onto your router, this can be done locally by going to 192.168.1.1 in a web browser, this is typically the Draytek routers IP address, however if changed you can find it by opening command prompt in Windows and in typing "ipconfig" your default gateway will likely be the Draytek, and you can get to this on a web browser by simply typing it in the address bar



Sign into the device with your username and password, typically admin and 1234 if default however this password may of been changed - if the Draytek was purchased by ourselves, we would of given a sheet of paper with the password on, however if you are still unaware, email support on support@ic.co.uk (mailto:support@ic.co.uk) as we may have a record.

Once you are signed in, go to system maintenance > firmware upgrade

← → ↻ 192.168.1.1

DrayTek

Vigor2860 Series

Auto Logout IP6

Dashboard

Wizards

Online Status

WAN

LAN

Hotspot Web Portal

Routing

NAT

Firewall

User Management

Objects Setting

CSM

Bandwidth Management

Applications

VPN and Remote Access

Certificate Management

LTE

Wireless LAN

SSL VPN

USB Application

System Maintenance

System Status

TR-069

Administrator Password

User Password

Login Page Greeting

Configuration Backup

SysLog / Mail Alert

Time and Date

SNMP

Management

Panel Control

Self-Signed Certificate

Reboot System

Firmware Upgrade

Modem Code Upgrade

Activation

Internal Service User List

Dashboard Control

Diagnostics

Central Management

VPN

AP

Switch

External Devices

Support Area

Product Registration

All Rights Reserved.

System Maintenance >> Firmware Upgrade

Firmware Version Status

Current Firmware Version: 3.8.6\_STD

Check The Latest Firmware

Web Firmware Upgrade

Select a firmware file.

Choose file No file chosen

Click Upgrade to upload the file.

Upgrade

TFTP Firmware Upgrade from LAN

Firmware Upgrade Procedures:

1. Click "OK" to start the TFTP server.

2. Open the Firmware Upgrade Utility or other 3-party TFTP client software.

3. Check that the firmware filename is correct.

4. Click "Upgrade" on the Firmware Upgrade Utility to start the upgrade.

5. After the upgrade is complete, the TFTP server will automatically stop running.

Do you want to upgrade firmware ?

OK

Note:

Upgrade using the ALL file will retain existing router configuration, whereas using the RST file will reset the configuration to factory defaults.

If your router is currently connected to the internet, you can select the check latest firmware option, and then select any of the firmwares as per the below

Check Firmware - Google Chrome

eu.draytek.com:12860/doc/frmupCheckFW.HTM

Language	Version	Firmware Download
English	3.8.8	Vigor2860_v3.8.8-00_en.zip Download
		Vigor2860_v3.8.8-01v_en.zip Download
		Vigor2860_v3.8.8-02v_en.zip Download
		Vigor2860_v3.8.8-03v_en.zip Download
		Vigor2860_v3.8.8-04v_en.zip Download

If you are not connected to the internet, you can select the Choose file option, this will allow you to upload the firmware from your local machine, Firmware for your Draytek can be found at - <https://www.draytek.com/en/download/firmware/>

Web Firmware Upgrade

Select a firmware file.

Choose file

No file chosen

Click Upgrade to upload the file. 

Upgrade

Then select upgrade, your router will reboot but should come back in a few minutes, and if it asks - you want to select the "keep my current settings" option on reboot.

Posted by: Keira Tait - Tue, May 22, 2018 at 10:59 AM. This article has been viewed 3922 times.

Online URL: <https://kb.ic.uk/article/draytek-firmware-upgrade-207.html> (<https://kb.ic.uk/article/draytek-firmware-upgrade-207.html>)