
## IC-Air Zyxel VMG1312 Router Configuration

Before you start to configure the router. Please see the Article "How to locate your configuration sheet". Once you have read and followed the steps in that article, you can proceed to configure your router.

1. Log into the device via IP 192.168.1.1 using these details ;username = admin Password = 1234

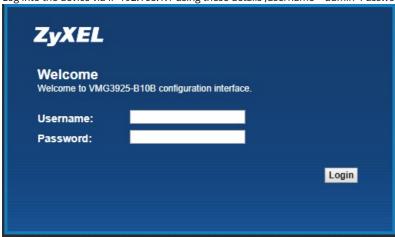


- 2. Change the admin password to the password on the configuration sheet.
- 3. Hover over network settings, and go to Broadband.



4. On ETH WAN, click modify on the far right.

Add New WAN Interface												
#	Name	Туре	Mode	Encapsulat	802.1p	802.1q	IgmpProxy	NAT	Default Gat	IPv6	MLD Proxy	Modify
1	ADSL	ATM	Routing	IPoE	N/A	N/A	Υ	Υ	Υ	N	N	
2	VDSL	PTM	Routing	PPP <sub>0</sub> E	0	101	Υ	Υ	Υ	N	N	
3	ETHWAN	ETH	Routing	IPoE	N/A	N/A	Υ	Υ	Υ	N	N	

- 5. Change encapsulation to PPPoE.
- 6. Change MTU to 1452.
- $7. \ \ \text{Enter the PPP username and password, this will be on the sheet you printed earlier}.$
- 8. Select Apply as default gateway. Click OK

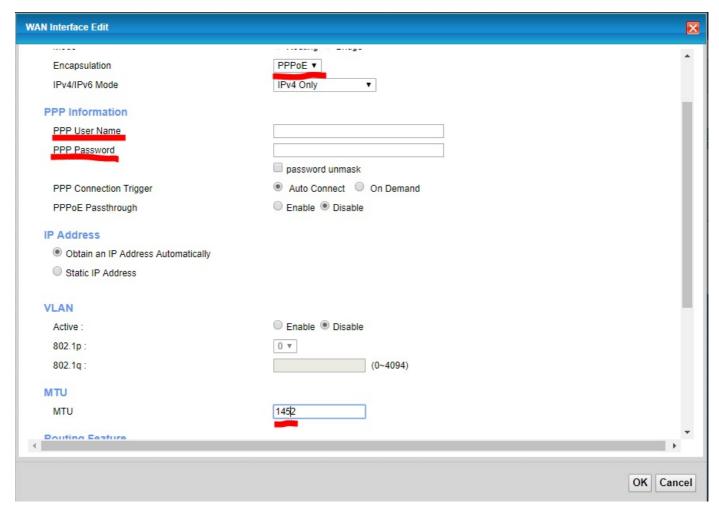

Finally, go to the Ethernet WAN tab at the top, enable LAN4 port as ETH WAN, apply.

Now you have completed the network setup, all that is left is end user settings and remote management.

1. 1. Hover over Maintenance, and go to Remote Management.



2. Click all of the trust domains for every port and APPLY.



You have now completed the steps to configuring your router.

Posted by: Wayne Coulthard - Thu, Aug 30, 2018 at 12:55 PM. This article has been viewed 7033 times.

 $On line \ URL: \ https://kb.ic.uk/article/ic-air-zyxel-vmg 1312-router-configuration-214.html \ (https://kb.ic.uk/article/ic-air-zyxel-vmg 1312-router-configuration-214.html)$